


## Without Power Adapter (for 8KX, 5K Super etc.)

Created by: Kathy Zheng

Modified on: Sat, 23 Jan, 2021 at 4:55 PM

**When the headset is disconnected, you could enter the DFU mode manually, here are the steps:**

**1)Close PiTool, shut down PiserviceLauncher in the task manager.**

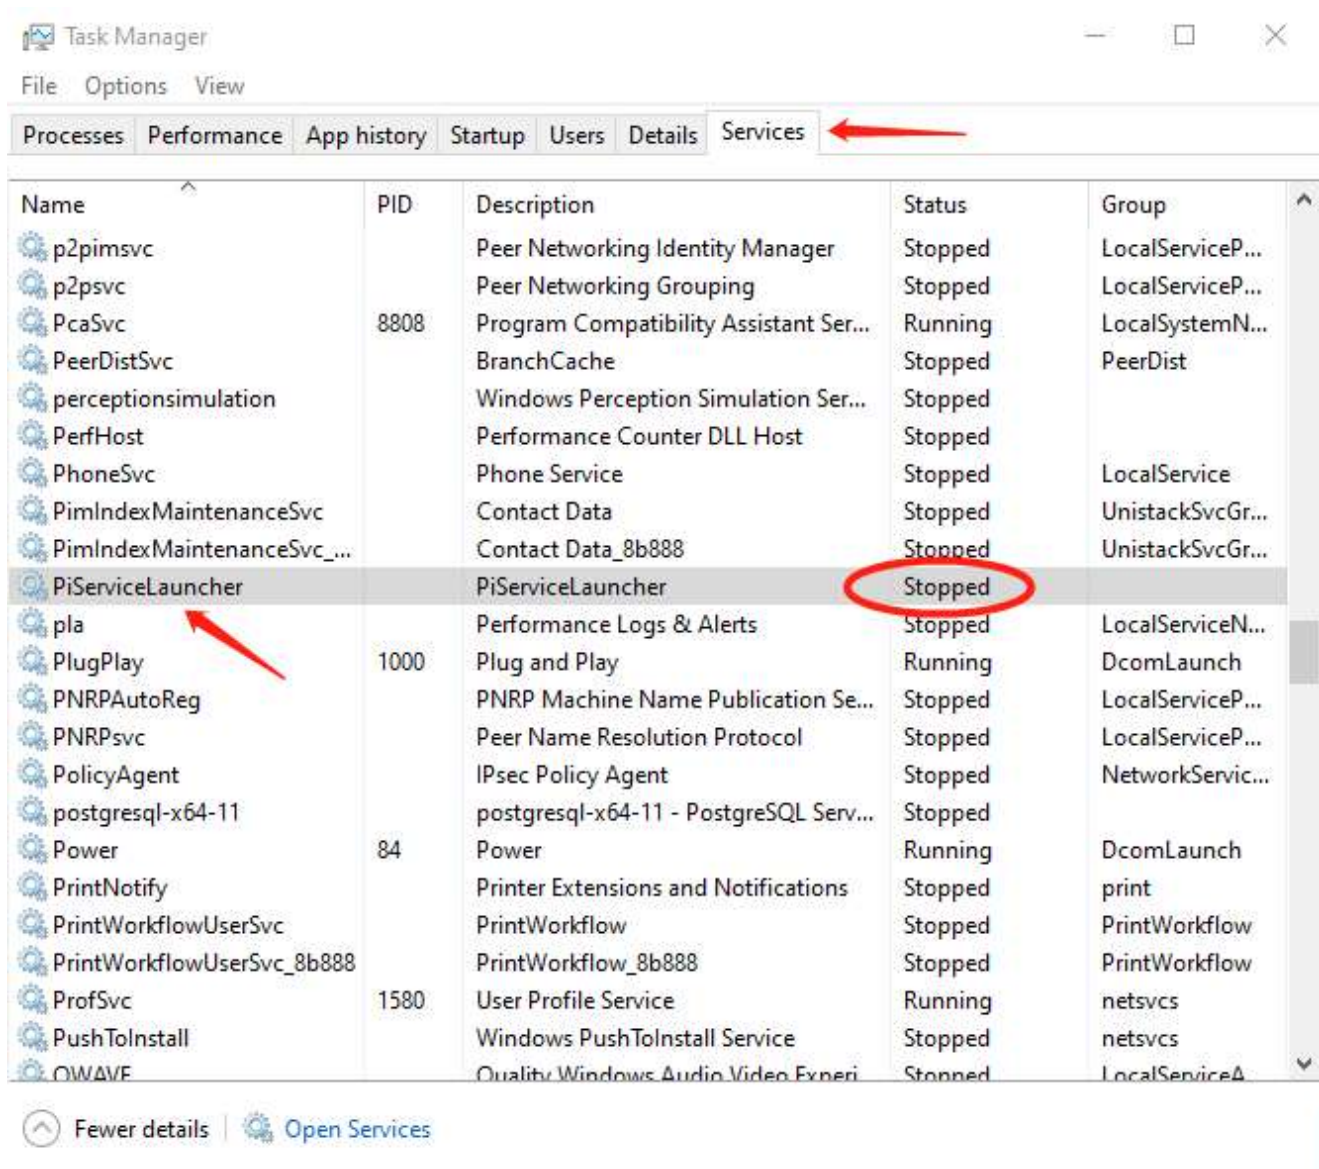

**2)Unplug the USB 3.0 is the USB cable whose interface is blue.**

**3)Plug the USB 3.0 while the 3 buttons are pressed, the LED turns white.**

**4)Count 8s, release the power button, the LED turns blue**

**5)Another 8s, release the button in the middle, still blue light**

6)1s later, release the last button, the LED should start flashing.

Without Power Adapter



K Kathy is the author of this solution article.